



Warewashing



Rack-type dishwasher PROFI CS series



Installation and Operation Manual

(Original Operation Manual)

EN

Typ: CS-20-01
From SN: 86 43 05001

28. Okt. 2025

Table of Contents

1	Notes on the documentation	4
1.1	Application.....	4
1.2	Layout of the documentation.....	4
1.3	Representation conventions.....	4
2	Safety instructions and regulations	5
2.1	Safety instructions and warning notices.....	5
2.2	Basic safety instructions.....	6
2.3	Property damage.....	8
3	Product description	9
3.1	General view and elements.....	9
3.2	Intended purpose.....	10
3.3	Designation	10
3.4	Technical data.....	10
3.5	Operating temperatures.....	10
3.6	Place of installation	11
4	Controls	11
4.1	Main switch and button.....	11
4.2	Control panel.....	11
5	Installation	12
5.1	Personnel qualification.....	12
5.2	Special safety instructions.....	12
5.3	Transporting to the installation location.....	13
5.4	Removing the packaging.....	13
5.5	Installing the machine	13
5.6	Assembly of modules.....	14
5.7	Connecting electrical loads.....	15
5.8	Tables and accessories.....	15
5.9	Connecting to the power supply.....	16
5.10	Connecting the water	17
5.11	Connecting the drain.....	17
5.12	Connecting the exhaust.....	17
5.13	Connect detergent and rinse aid.....	20
6	Commissioning	21
6.1	Personnel qualification.....	21
6.2	Special safety instructions.....	21
6.3	Preparing the machine.....	21
6.4	Fill the booster	22
6.5	Carry out checks.....	22
6.6	Making the chemical settings.....	23

6.7	Adjusting the exhaust system.....	23
7	Operation.....	23
7.1	Personnel qualification.....	23
7.2	Special safety instructions.....	24
7.3	Notes for optimum wash results.....	24
7.4	Preparations for washing.....	25
7.5	Functions and operating modes.....	29
7.6	Pressing the EMERGENCY STOP button.....	30
7.7	Washing.....	30
7.8	Selecting the conveyor speed.....	31
7.9	Switching off the conveyor.....	31
7.10	Switching off the machine.....	31
7.11	Executing daily cleaning.....	32
7.12	Performing monthly cleaning.....	36
8	Setting options.....	37
8.1	Overview of operator menu.....	37
8.2	Opening the operator menu.....	37
8.3	Display hour counter "Machine ON".....	38
8.4	Display hour counter "Conveyor ON".....	39
8.5	Display hour counter "Washing ON".....	39
8.6	Display hour counter "Rinsing ON".....	39
8.7	Activating emergency mode.....	39
9	SmartConnect - WiFi / LAN / GSM (option).....	40
9.1	Integrating the machine into the GSM network.....	40
9.2	Integrating the machine into the local WiFi.....	40
9.3	Integrating the machine into the LAN.....	41
9.4	Registering the machine.....	41
10	Faults and problems.....	42
10.1	Troubleshooting guide.....	42
10.2	Remedying the problem.....	44
11	Service and maintenance.....	46
12	Disposal.....	47
13	Product disclaimer.....	47
14	Conformity.....	48

PROFI CS series

Notes on the documentation

1 Notes on the documentation

1.1 Application

This document contains the most important information for the installation and commissioning of the machine by qualified personnel, as well as the information required for day-to-day operation by the operator.

- ▶ Keep the operation manual and all referenced documents in a safe and accessible place.
- ▶ Store the operation manual in a suitable container protected from humidity and dirt deposits.
- ▶ If you sell the machine, pass on the installation and operation manual.

1.2 Layout of the documentation

Referenced documents are all instructions that describe the installation, operation, maintenance and repair of the device, as well as additional instructions for all accessories used.

For the operator:







- Comic Card (brief instructions)
- Operation instructions






For the specialised tradesman or HOBART service:

- Installation Instructions
- Floor plan
- Wiring Diagram
- Service Manual
- Troubleshooting list
- Maintenance schedule
- Spare Parts Catalogue

1.3 Representation conventions

1.3.1 Symbols used

Symbol	Meaning
	Beware of hazardous electrical voltage
	Beware of explosion
	Beware of crushing
	Beware of entanglement
	Beware of hazardous substances
	Beware of hand injuries

Symbol	Meaning
	Beware of slipping
	Beware of hazard area
	Reaching in prohibited
	Useful additional information and tips
	Read operation manual

1.3.2 Representation in the text

Representation	Meaning
NOTE	Important note for the operation of the machine, not a warning notice
▶	Step
↳	Outcome/result
–	Listing 1nd level
•	Listing 2nd level

2 Safety instructions and regulations





2.1 Safety instructions and warning notices

- ▶ During machine operation, observe the general safety instructions and warning notices that precede each action.

2.1.1 Hazard levels

The hazard level is part of the safety instructions and is indicated by the signal word.

Potential consequences are differentiated by the choice of signal word.

	Imminent danger: results in serious physical injury or death.
	Potentially hazardous situation: may result in serious physical injury or death
	Potentially hazardous situation: may result in minor physical injury
	Potentially harmful situation: may cause damage to the product or other objects

PROFI CS series

Safety instructions and regulations

2.1.2 Layout of warning notices

Warning notices are depicted with warning symbols and signal words in the corresponding safety colours.

CAUTION!



Nature and source of the hazard

Explanation on the nature and source of the hazard

- ▶ Measures for averting the hazard
- ▶ Additional measures for averting the hazard, where applicable

2.2 Basic safety instructions

2.2.1 Product safety

The machine conforms to state-of-the-art technology and the recognised safety regulations. Nonetheless, hazards may occur.

Operate the machine only in compliance with the operation manual.

All modifications and alterations to the product are reserved for persons authorised by HOBART.

2.2.2 Personnel qualification

- ▶ Observe the regulations on occupational health and safety. Wear personal protective equipment.
- ▶ Carefully read through the Installation and Operation Manual before use.

Activity	User group	Qualification/training
Installation	Qualified personnel	Hobart Service or an electrically qualified person trained by Hobart or a competent person acc. to the German technical regulations for occupational safety (TRBS 1203) trained by Hobart
	Trainees	Only under professional supervision and examination
Commissioning	Qualified personnel	Hobart Service or an electrically qualified person trained by Hobart or a competent person acc. to the German technical regulations for occupational safety (TRBS 1203) trained by Hobart
	Trainees	Only under professional supervision and examination
Work on electrical system	Qualified personnel	Hobart Service or an electrically qualified person trained by Hobart or a competent person acc. to the German technical regulations for occupational safety (TRBS 1203) trained by Hobart
Work on refrigeration systems	Qualified personnel	Category 1 expert certified in accordance with: - Ordinance (EU) No. 517/2014 Article 10 - Implementing regulation (EU) 2015/2067 - German Chemicals Climate Protection Ordinance §5
Operation	Operating personnel and persons over the age of 14	Only under supervision and after instruction by the operator on the basis of the Operation Manual, instructions on dangers
	Handicapped individuals	The suitability must be assessed by the operator on an individual basis
	Persons up to the age of 13	Persons up to the age of 13 are not suited for machine operation

Activity	User group	Qualification/training
Maintenance, repair	Qualified personnel	Hobart Service or an electrically qualified person trained by Hobart or a competent person acc. to the German technical regulations for occupational safety (TRBS 1203) trained by Hobart
	Trainees	Only under professional supervision and examination

2.2.3 Product-specific hazards

Avoid body parts being crushed or knocked:

- ▶ Observe the instructions on the packaging for storage, lifting or transporting.
- ▶ Transport is reserved for certified and trained personnel.
- ▶ Only certified qualified personnel are permitted to install the machine, assemble the modules, install the conveyor system and connect the exhaust pipework.
- ▶ Ensure that the operators wear tight-fitting clothing.
- ▶ Do not reach into the conveyor system during operation.
- ▶ Carefully remove the wash arms when cleaning the machine.

Avoid body parts being cut:

- ▶ Wear personal protective equipment when removing the packing bands, unpacking the modules and tensioning the conveyor belt.
- ▶ Only certified, qualified personnel are permitted to connect the exhaust pipework and set the exhaust system.
- ▶ Wear protective gloves when cleaning the machine.
- ▶ Only certified personnel are permitted to clean the exhaust condenser.

Avoid risk of explosion:

- ▶ Do not install machine in a potentially explosive location.

Avoid electric shock:

- ▶ Do not allow water to flow over live components.
 - Make sure the machine is correctly stored (see frost damage section 2.3).
 - Do not spray the outside of the machine with a water hose or high-pressure cleaner.
- ▶ Have the machine connected to the power supply by qualified personnel.
- ▶ Have the boiler and the fill boiler initially filled and the motors checked only by certified, qualified personnel and in accordance with the operation manual.
- ▶ Have wearing or faulty parts replaced only by certified, qualified personnel.

Avoid fire risk:

- ▶ Do not allow water to flow over live components.
 - Make sure the machine is correctly stored (see frost damage section 2.3).
 - Do not spray the outside of the machine with a water hose or high-pressure cleaner.
- ▶ Have the machine connected to the power supply by qualified personnel.
- ▶ Have all modifications to the machine, repairs and maintenance carried out only by qualified personnel.

Avoid chemical burns, sensitisation of the skin, poisoning:

- ▶ Wear protective equipment (gloves, safety goggles, protective clothing) when handling chemicals.
- ▶ Use only suitable chemicals. Observe the manufacturer's data.
- ▶ Do not open the door during operation.
- ▶ Disconnect the machine from the mains prior to cleaning.

Avoid risk of falling:

- ▶ Do not stand on the machine roof when connecting the exhaust pipework.

PROFI CS series

Safety instructions and regulations

Avoid slipping:

Moisture can build up on the floor around the machine.

- ▶ Provide a floor covering that does not pose a risk of slipping when wet.

Residues on the wash ware, hygiene regulations not maintained:

- ▶ Hygiene regulations must be observed and/or demonstrated in accordance with the national provisions.

2.2.4 Additional hazards

Potential hazards caused by operating resources to be used can be found in the enclosed safety datasheets. Workplaces must be marked accordingly.

2.3 Property damage

Avoid frost damage:

Temperatures below 0°C lead to functional damage.

- ▶ Before storing below 0°C, empty residual water in hoses, tank and boiler.
- ▶ Prior to restart, store the machine at room temperature (min. 15°C) for 24h.


Avoid water damage:

- ▶ Do not operate the machine without supervision.
- ▶ Close on-site shut-off valves at the end of operation.

3 Product description

3.1 General view and elements

Example: Model E-A-D

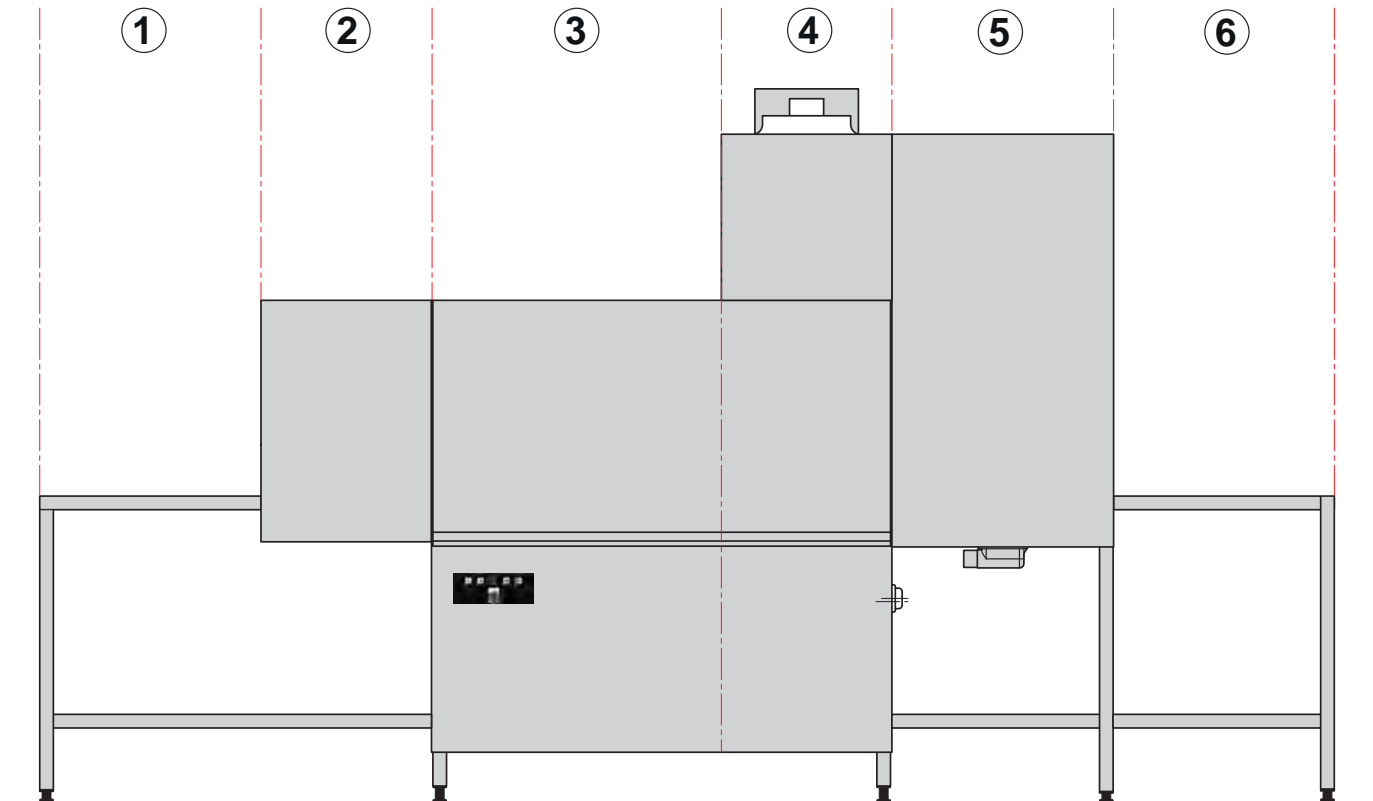

- ① Table
- ② Pre-wash
- ③ Wash

- ④ Rinse
- ⑤ Drying
- ⑥ Table


3.1.1 Curtain arrangement

NOTE: Illustration applies to left/right running direction. The curtain arrangement is reversed for right/left running direction.


Curtain types

PROFI CS series

Product description

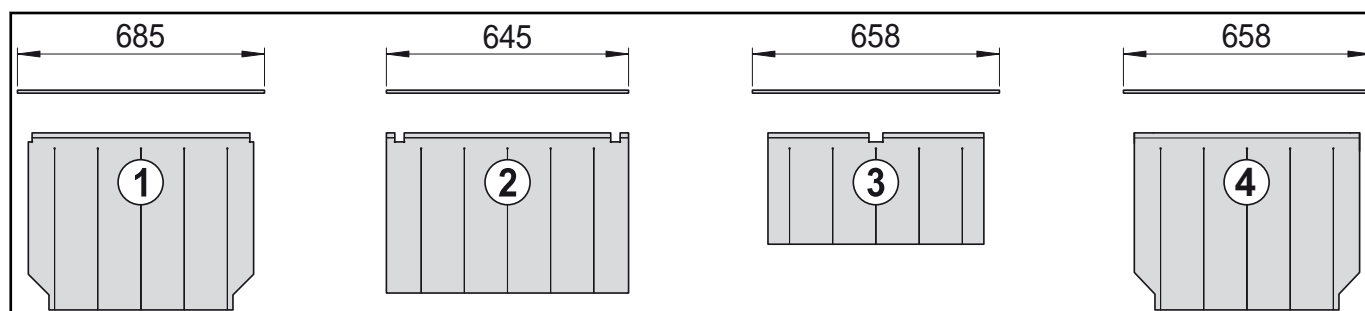

Module variants

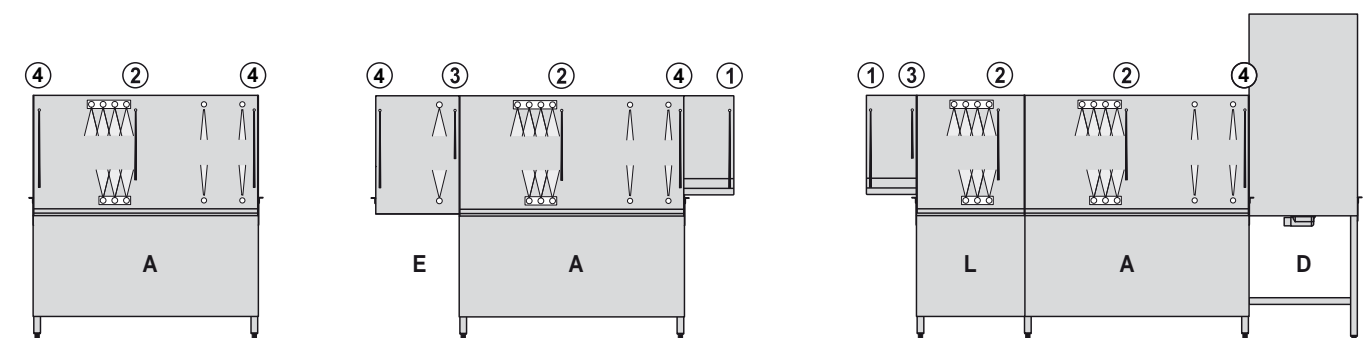

3.2 Intended purpose

The machine is an item of technical equipment intended solely for commercial dishwashing.

The machine is designed solely for cleaning crockery (porcelain, glass, ceramic, temperature-resistant plastics or stainless steel or similar) from the food industry.

Not for washing:

- Containers that do not come into contact with foodstuffs, such as ashtrays, electric appliances etc.
- Animals or textiles
- Foodstuffs intended for further consumption

3.3 Designation

The rating plate is located on the control box and contains the following information: model, serial number, date of manufacture, country of manufacture, voltage, connection rating, design-state number and CE mark.

3.4 Technical data

See separate floor plan.

Noise emission:

Workplace-related emission value:

Emission sound pressure level $L_{pA} = 69$ dB (A)

Measurement uncertainty $K_{pA} = 2.5$ dB

3.5 Operating temperatures

Prewash tank	45 – 55°C
Main wash tank	min. 60°C

Pumped rinse	60 – 65°C
Fresh water rinse	80 – 85°C

3.6 Place of installation

The place of installation must be frost-proof. Temperatures below 5°C can result in damage.



Anti-slip flooring must be provided in the working area around the machine.

Installation in potentially explosive areas is not permitted.


The max. permissible installation altitude is 2000 mamsl. Installation altitudes over 2000 mamsl on request. Room ventilation as per VDI 2052.

4 Controls

4.1 Main switch and button

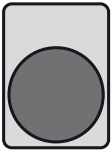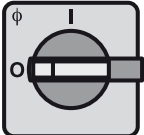	EMERGENCY STOP button The machine has been shutdown, but is not voltage free. Must be unlocked for operation.
	Main switch For operation, must be set to position I, for repair and maintenance work to position 0.

4.2 Control panel

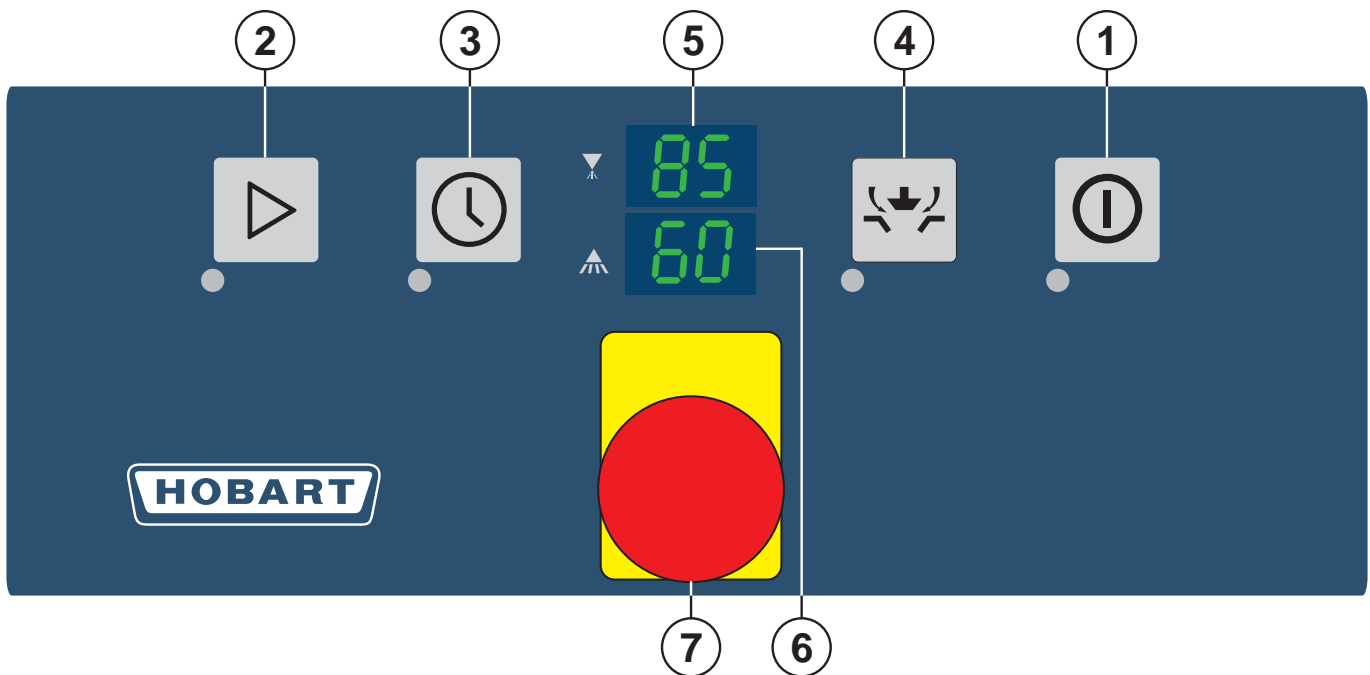

Item	Title	Meaning
①	ON/OFF button	Pressing this button (> 3 seconds) switches the machine on or off. In case of operating error or faults, the machine can be switched off immediately without prior draining by pressing this button. After switch off, however, the machine is not voltage free.
②	Conveyor start button	Pressing this button switches the conveyor on. Washing, rinsing and drying start. Pressing the button again switches the conveyor off.
③	Programme selection button	Pressing this button allows you to choose between different transport speeds.
④	Drain (empty) button	Pressing and holding this button for > 3 seconds drains the machine. A washing or filling programme that may be active is aborted. Then the machine switches OFF automatically The machine is not voltage-free after being switched off!
⑤	Temperature display, rinsing	Indicates the current temperature of the fresh water rinse.
⑥	Temperature display, washing	Indicates the current temperature of the wash tank.
⑦	EMERGENCY STOP button	Machine is completely switched off. Must be unlocked for operation.

5 Installation

5.1 Personnel qualification

Installation is reserved for qualified personnel (see section 2.2.2).

5.2 Special safety instructions

WARNING!



Risk of electric shock, fire hazard

Frost damage can lead to water flowing over live components and thus to injuries from electric shock or fire.

- ▶ Make sure the machine is correctly stored (see frost damage section 2.3).

WARNING!



Risk of explosion

Installing the machine in a potentially explosive location can cause explosion and serious injury from ejected parts.

- ▶ Do not install machine in a potentially explosive location.

NOTICE!

Temperatures below 0°C during transport/storage cause function impairments.

- ▶ Prior to installation, store the machine at room temperature (min. 15°C) for 24h.

5.3 Transporting to the installation location

WARNING!



Risk of being crushed or knocked

When being lifted and transported, the machine can overturn or fall and cause serious injury.

- ▶ The machine and packages must be secured against slipping on the means of transport.
- ▶ Observe the instructions on the packaging for storage, lifting or transporting.
- ▶ Have the machine transported only by certified and trained personnel.
- ▶ Do not stand under suspended loads.

- ▶ If possible transport the machine in its packaging and on the pallet.
- ▶ If a forklift is used, put a wooden frame under the machine.
- ▶ Use suitable transport means (elevating truck, crane etc.).
- ▶ Push on rollers.
- ▶ Avoid damage to floors and doors.
- ▶ Avoid damage to the machine.

5.4 Removing the packaging

CAUTION!



Risk of being cut

Removing the packing bands can cause cut injuries. When unpacking the modules, the sharp edges of the sheet parts can cause cut injuries.

- ▶ Wear personal protective equipment.

- ▶ Cut off packing bands.
- ▶ Remove outside carton.
- ▶ Remove pallet.
- ▶ Remove packing materials and accessories from the machine.
- ▶ Inspect the machine for possible transport damage.

5.5 Installing the machine

CAUTION!



Risk of being crushed

Body parts can be crushed while the machine is being set down.

- ▶ Have the machine installed only by certified, qualified personnel.
- ▶ Wear protective gloves.

NOTE: If the machine is delivered in separate modules, align the largest machine part at the installation location first (see also 5.6).

- ▶ Align the machine according to the installation plan.
- ▶ Observe wall clearances according to the installation plan.
- ▶ Align machine by turning the adjusting feet according to the height of the adjacent tables, conveyors, etc.
- ▶ Level out any unevenness in the floor.
- ▶ Distribute machine weight equally onto all feet.

5.6 Assembly of modules

⚠ WARNING!



Risk of being crushed or knocked

When assembling modules, raised machine parts can overturn or fall and cause serious injuries.

- ▶ Have the modules assembled only by certified, qualified personnel.
- ▶ Wear personal protective equipment.

⚠ CAUTION!



Risk of being cut

When assembling modules, sharp edges on sheet parts can cause cut injuries.


- ▶ Have the modules assembled only by certified, qualified personnel.
- ▶ Wear protective gloves.

- ▶ Remove covers.

Affixing sealing tape:

Remove any old seals.


- ▶ Affix sealing strip no. 168 834-14 all the way around one of the two contact surfaces.

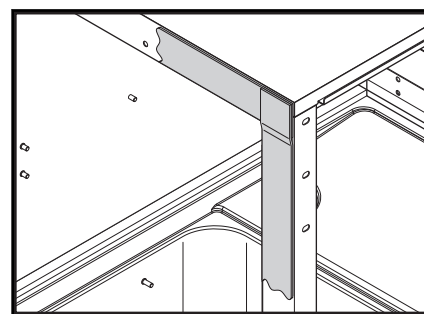

- ▶ Allow the strip ends to overlap in the corners.

Adding next modules:

- ▶ Level the height (see 5.5).
- ▶ Connect modules (use screws SK M6 x 12, washers, spring rings and nuts supplied).

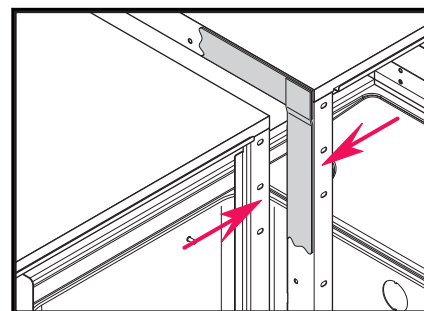


- ▶ Cut off protruding sealing tape with knife.
- ▶ Connect the drain pipes.

Connecting wash tanks:

- ▶ **Install overflows. :**


- ▶ Set sealing ring (A) on the overflow pipe (B).

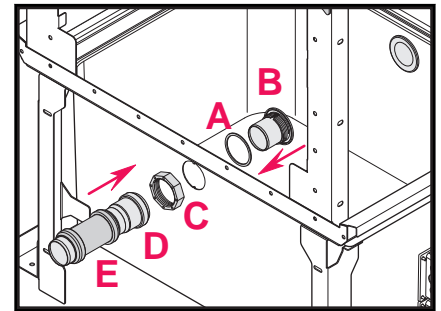

- ▶ Put the overflow pipe (B) from the inside of the tank through the pre-punched hole and tighten it with the nut (C).
- ▶ Push coupling (E) over pipe (D). Attach the pipe to the overflow (B) and connect with the overflow pipe of the opposite wash tank.

Remove transport feet (if present):

- ▶ Unscrew transport feet and return to the HOBART branch.

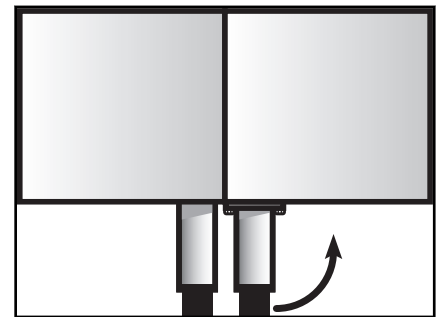

5.7 Connecting electrical loads

NOTE: Follow the wiring diagram and the labels on wires and terminals.


- ▶ Unroll cable bundles and lay them in the front cable channel. When laying the cables, avoid mechanical damage to the lines.
- ▶ Connect the cables to the connection terminals of the consumers.

5.8 Tables and accessories

- ▶ Seal screw holes.




- ▶ Position the machine on a slight incline (by adjusting the feet if necessary).

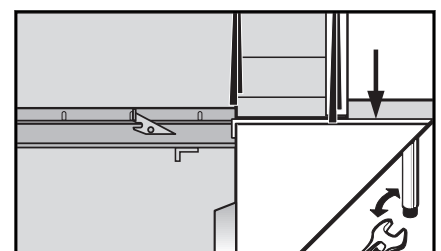

- ▶ Make sure that the bearing surface of the rack on the table or roller conveyor coincides with the bearing surface on the machine.


Table limit switch:

- ▶ Protect the cable from the limit switch to the control cabinet.

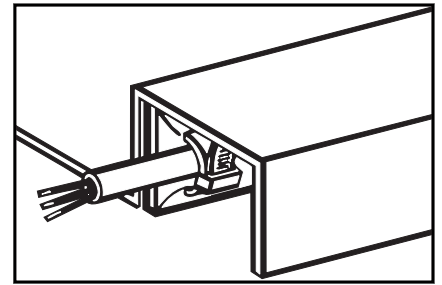

Tables on castors:

- ▶ Close the connector of the limit switch and secure with clamps.

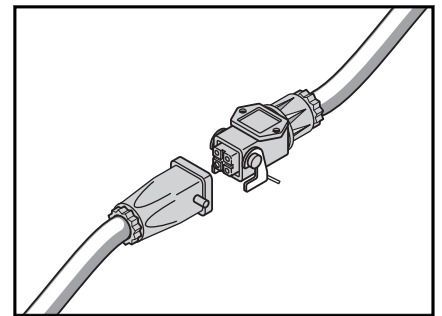

- ▶ Create equipotential bonding between swivel table and machine.

5.9 Connecting to the power supply

WARNING!



Risk of electric shock

Failure to connect properly to the power supply can cause mortal danger from electric shock.

- ▶ Have the machine connected to the power supply only by qualified personnel.
- ▶ Take cable measurement DGUV V3.

NOTE: To guarantee the electrical safety of the machine, it must be connected to a protective earthing equipment conductor installed as specified. In addition, the machine must be connected on site to the equipotential bonding connection. The terminal screw provided for this purpose is located on the floor of the base frame below the cable inlet.

These fundamental safety requirements and the professional design of the on-site installation must be verified by a qualified electrician.

Hobart does not accept any liability for damage caused by improper installation! Any applicable local installation instructions must be observed!

The mains cable must be connected via a cut-out device (main switch or accessible plug device).

The power supply must be consistent with the data on the rating plate.

- ▶ Open the control box and take out the wiring diagram from the inside of the door.
- ▶ Fuses and cable cross section must be designed accordingly.
- ▶ Draw mains cable (H07-RN-F) through the cable gland.
- ▶ Connect wires to main switch.
- ▶ Tighten all terminal screws in the control box.
- ▶ Tighten cable gland.

5.10 Connecting the water

NOTE: The machine must be operated with potable water. For water with an extremely high mineral content, an external demineralisation unit is recommended. In the EU, Switzerland and possibly other countries, a type EA backflow preventer must also be installed at the water connection in order to comply with the requirements of EN 61770 (e.g. HOBART part no. 04-019574-001). Applicable local installation instructions must be observed.

- ▶ Connect water supply and drain pipes according to installation plan.

Line strainer and air gap are fitted to the machine as standard.

Water hardness:

- Fresh water rinse: max. 3 °d = 0.5 mmol/l; 80 – 120 µs/cm
- Tank filling: max. 3 °d = 0.5 mmol/l.; 150 – 400 µs/cm

Flow pressure:

- Fresh water rinse: 1.5 – 6 bar at 500 l/h
- Tank filling: 1.5 – 6 bar min. 1200 l/h
- If the flow pressure is above 6 bar: provide pressure reducing valve.


Temperature:

- Fresh water rinse without the CLIMATE option: 12 – 60 °C;
- Fresh water rinse with CLIMATE: 12 - 20°C;
- Tank filling: 50 – 60 °C
- ▶ Connect the machine (via 3/4" external thread) to site water supply.
- ▶ Provide shut-off valves on site.

NOTE: The supplied hose sets must be used! Do not use used hose sets again!

5.11 Connecting the drain

- ▶ Connect central drain DN 50 (HT pipe) to site wastewater system. Any applicable local installation instructions must be observed!

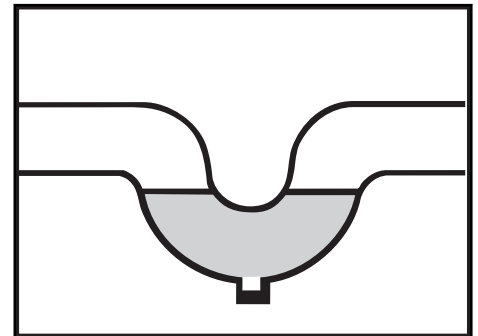

- ▶ Connect drip water drains on the table modules, sinks and other adjacent elements to the site waste water system.
- ▶ Equip all drains, either individually or in groups, with odour traps (siphon).
- ▶ Fit bottom drain of scullery with siphon.

5.12 Connecting the exhaust

NOTE: Applies only for machines requiring an exhaust air connection. All measures must be agreed in consultation with the responsible ventilation engineer. Observe the locally-applicable provisions (Germany e.g. VDI 2052). The notes on the connection diagram must be observed.

PROFI CS series

Installation

⚠ CAUTION!



Risk of falling

Risk of falling when stood connecting the exhaust pipework to the machine roof. The machine roof can deform or buckle.

- ▶ Do not stand on the machine roof.

⚠ CAUTION!




Risk of being cut or crushed

Rotating parts can cause crushing or cut injuries when connecting the exhaust pipework.

- ▶ Have exhaust pipework connected only by certified, qualified personnel.


5.12.1 Connect exhaust to the ventilation system

- ▶ To prevent corrosion damage, execute exhaust channel in plastic or CrNi.
- ▶ Leave a clearance (approx. 10 cm) between machine and on-site exhaust channel or connect special connection adapter (available as accessory).

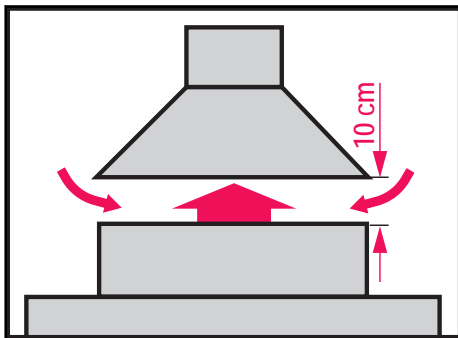

- ▶ Provide an exhaust fan in the exhaust system. The fan installed in the machine has no compression.
- ▶ The air volume to be evacuated from site has to be greater than the exhaust volume of the machine (see installation diagram).
- ▶ For outdoor pipework: Provide insulation and automatically self-closing anti-freeze shutter.


Variant 1: To site exhaust system

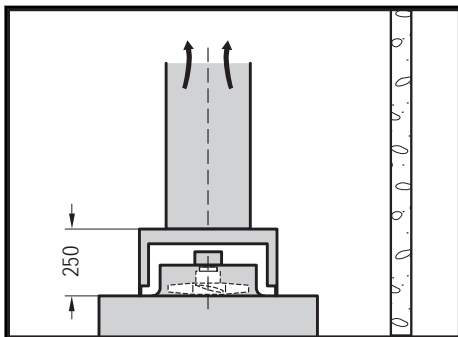

- With vent hood (available as an option from HOBART)

Connecting the exhaust:


- ▶ Connect to site exhaust system with an output corresponding to the values in the installation plan (see graphic).

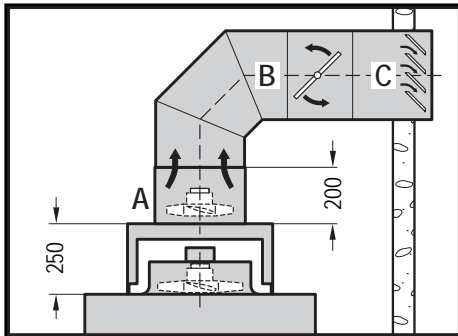Variant 2: Via pipe to the outside

- With vent hood (available as an option from HOBART)
- A voltage-free contact is provided in the machine control box to control the external exhaust fan (see wiring diagram).
- Built-in additional fan (A) installed.

Connecting the exhaust:

- ▶ To prevent corrosion damage, execute exhaust channel in plastic or CrNi.
- ▶ Provide anti-freeze shutter (B).
- ▶ Provide blind (C) on the pipe outlet in open air.

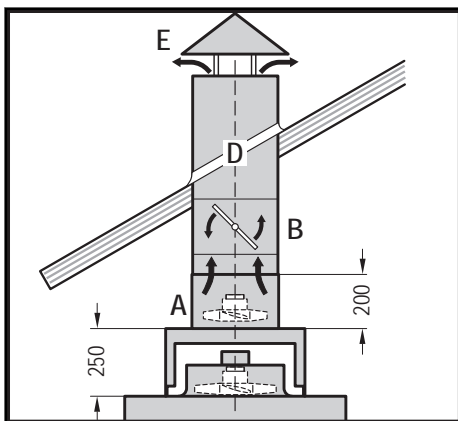Variant 3: Via vertical pipe in open air

- With vent hood (available as an option from HOBART)
- A voltage-free contact is provided in the machine control box to control the external exhaust fan.
- Built-in additional fan (A) installed.


Connecting the exhaust:

- ▶ To prevent corrosion damage, execute exhaust channel in plastic or CrNi.
- ▶ Provide anti-freeze shutter (B).
- ▶ Provide roof sealing (D) on the pipe.
- ▶ Provide cover (E) on the pipe outlet to the outside.

PROFI CS series

Installation

5.12.2 Connect exhaust air free in the room

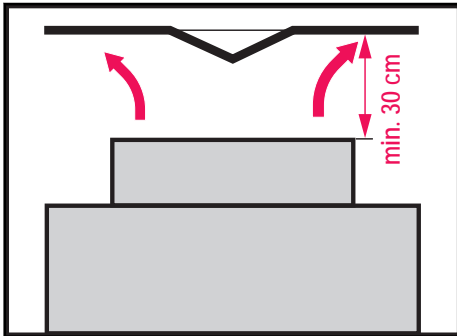

NOTE: Provide adequate room ventilation. Observe the locally-applicable provisions (Germany e.g. VDI 2052).

NOTICE!

Property damage

Escaping waste steam can cause damage due to condensate formation.

- ▶ Ensure that waste steam is swirled with the room air immediately after exiting the machine.

5.13 Connect detergent and rinse aid

⚠ WARNING!



Risk of electric shock

Mounting the dosing technology, touching live parts (boiler heater, tank heating, pumps) when working under voltage.

- ▶ Have dosing technology mounted by qualified personnel.
- ▶ Disconnect the mains voltage on site.

⚠ CAUTION!



Chemical burns, sensitisation of the skin, poisoning

Improper use of chemicals or use of unsuitable chemicals can cause injury.

- ▶ Use only commercial detergent and rinse aid.
- ▶ Observe the manufacturer's application and safety instructions.

NOTICE!

Property damage

If the dosing technology is mounted directly to the machine, insulation and components may be damaged.

- ▶ Have dosing technology mounted by qualified personnel.


Normally, dosing technology and its control are delivered and installed by the product suppliers.

NOTE: Observe separate installation instructions.

Mounting the dosing technology and its controls:

- ▶ Install dosing technology, reservoirs and controls in such a way that they are easily accessible, easily visible, easy to service and do not disrupt machine operation.

- ▶ Connect the rinse aid above the continuous-flow heater (A) to the rinse water line (R 1/8" internal).

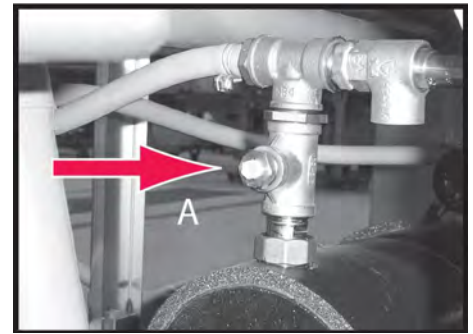

- ▶ For the detergent dosage connecting points, refer to the separate installation instructions.
- ▶ Terminals ("XD") for the electrical power supply and to control the dosing technology are located in the control box (see wiring diagram). Other connections must not be used.
- ▶ Make sure that the safety of the dishwasher is not impacted when installing dosing technology.
- ▶ Make any holes so that the electrical safety of the machine is not put at risk in the event of leaks.

6 Commissioning

6.1 Personnel qualification

Commissioning is reserved for qualified personnel (see section 2.2.2).

6.2 Special safety instructions

NOTE: Before commissioning the machine, the relevant electrical safety checks must be performed according to the locally applicable regulations!

WARNING!



Risk of electric shock

When initially filling the boiler and the fill boiler and checking the motors, contact with live components can lead to serious injury.

- ▶ Have these activities carried out only by certified, qualified personnel and in accordance with the operation manual.
- ▶ Wear personal protective equipment (protective gloves, safety goggles).

6.3 Preparing the machine

- ▶ Turn off the main switch.
- ▶ Open site shut-off valves.
- ▶ Ensure that the detergent and rinse aid containers are full.
- ▶ Pull the EMERGENCY STOP button.
- ▶ Close control cabinet and inspection doors, attach the covers.
- ▶ Turn on the main switch.
- ▶ **Check rotational direction of the motors (see rotational direction arrows):**
 - ▶ Check drive motor.
 - ▶ Check pumps.

PROFI CS series


Commissioning

- ▶ Check drying (if fitted).
- ▶ Check suction system (if fitted).


6.4 Fill the booster

Before initial startup, the boiler must be filled with water.

- ▶ Open the on-site valve.
- ▶ Press the ON/OFF button and close the doors
- ▶ The display shows "bF": initial boiler filling necessary!

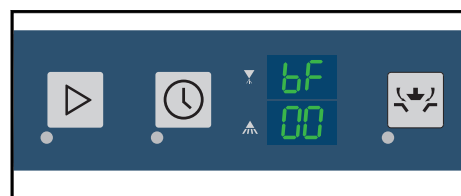

- ▶ Start filling the boiler by pressing the conveyor start button and the programme selection button at the same time

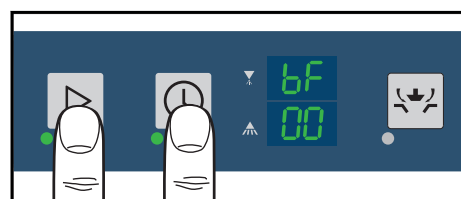

↳ The display flashes when the boiler is being filled


↳ Once filling the boiler has finished, the bottom display shows "01"

- ▶ Open the door and check whether water has splashed out of final rinse arms.



↳ If the initial filling was not successful, filling can be repeated by closing the door.

- ▶ If the initial filling was successful, before closing the door, this must be confirmed by pressing the conveyor start button and the programme selection button at the same time.

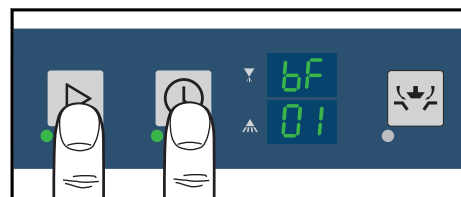

↳ Display shows the temperature values

6.5 Carry out checks

- ▶ Turn off the main switch.
- ▶ Remove all coverings.
- ▶ Turn on the main switch.
- ▶ Turn on machine, see section 7.4.2.
- ▶ **Checking safety functions:**
 - ▶ Check EMERGENCY STOP.
 - ▶ Check conveyor limit switch.
 - ▶ Check conveyor blockage.
 - ▶ Check the door contacts.
- ▶ **Search for and eliminate any leaks:**
 - ▶ Check drain pipes.

- ▶ Check heating lines.
- ▶ Check water pipes.
- ▶ Check machine housing.
- ▶ Check tank bottom.
- ▶ Check suction system.
- ▶ Turn off the main switch.
- ▶ Re-attach all coverings.

6.6 Making the chemical settings

CAUTION!



Chemical burns, sensitisation of the skin, poisoning

Improper use of chemicals or use of unsuitable chemicals can cause injury.

- ▶ Use only commercial detergent and rinse aid.
- ▶ Observe the manufacturer's application and safety instructions.

WARNING!



Chemical burns, sensitisation of the skin, poisoning

Incorrect handling of detergent or rinse aid can lead to serious injuries.

- ▶ Wear protective equipment (gloves, safety goggles, protective clothing) when handling chemicals.

6.7 Adjusting the exhaust system

CAUTION!



Risk of being cut

When adjusting the exhaust system, sharp edges of sheet parts can cause cut injuries.

- ▶ Have the exhaust system adjusted only by certified, qualified personnel.
- ▶ Wear protective gloves.

- ▶ Set the required site exhaust volume in accordance with the values in the installation plan.
- ▶ Please inform customer service of any modifications.

7 Operation

7.1 Personnel qualification

The machine must be operated by instructed personnel (see section 2.2.2).

PROFI CS series

Operation

7.2 Special safety instructions

WARNING!



Crushing or entanglement hazard

Loose items of clothing can be caught in the transport system belt and cause serious crushing injuries as the machine is being operated.

- ▶ Ensure that the operators wear tight-fitting clothing.

WARNING!



Crushing or entanglement hazard

The operator can be caught in the drive when reaching into or between the conveyor system at the loading or unloading sections. This can cause serious crushing of the fingers or hands.

- ▶ Do not reach into the conveyor system during operation.

CAUTION!



Chemical burns, sensitisation of the skin, poisoning

If the door is opened during operation, wash water can spurt out and cause injury.

- ▶ Press the ON/OFF button before opening the door.
- ▶ Do not open the door during operation.

WARNING!



Danger of slipping

Moisture can build up around the machine and cause slipping.

- ▶ Provide a floor covering that is guaranteed to be non-slip in case of moisture.

7.3 Notes for optimum wash results

The rinse result is significantly affected by the water quality. If the mineral content is high, the minerals dissolved become visible on the glasses in the form of spots and streaks during the drying process.



Authorised HOBART service personnel can determine the mineral content by measuring the electrical conductivity. Values of less than 80 $\mu\text{S}/\text{cm}$ are non-critical for rinsing glasses and cutlery. If the values are higher, we recommend the use of a HOBART HYDROLINE desalination cartridge or a reverse osmosis system.

If you have any questions, please contact your authorised HOBART service partner.

7.4 Preparations for washing

7.4.1 Preparing the machine

- ▶ Hanging the curtains.



- ▶ Inserting the tank cover strainers.



- ▶ Inserting the strainer baskets.



- ▶ Inserting the strainer in the rinsing area.



Inserting wash arms:

PROFI CS series

Operation

- ▶ Upper: insert wash arm in side guides, move over retaining lug and click into place.



- ▶ Lower: move wash arm in side guides to end position and click into place.



- ▶ Close cleaning opening of the wash arms.

Inserting rinse arms:

- ▶ Upper: insert rinse arm into back opening, move from below into front guide and click into place.




- ▶ Lower: move rinse arm back in guides and click into place.


7.4.2 Switch on machine

- ▶ Open on-site shut-off valves.
- ▶ Check fill level of detergent and rinse aid containers.
- ▶ Close inspection doors.
- ▶ Pull the EMERGENCY STOP button.

- ▶ Turn on main switch.

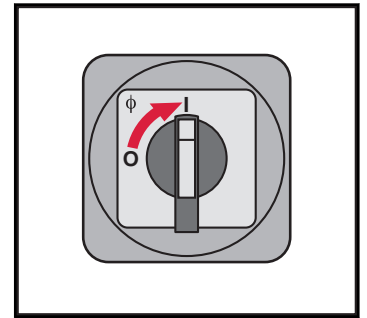

- ▶ Press the machine ON/OFF button.

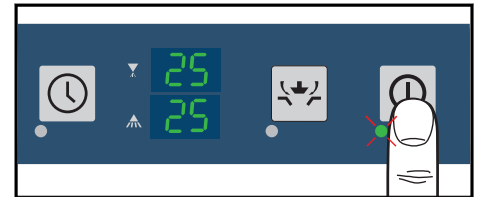


- ↳ Machine is filled automatically
- ↳ During the filling and heating processes, the LED of the 7 segment display (boiler and wash tank) flashes if the heating is active. This process can take several minutes
- ↳ As soon as the LED is permanently lit, the machine is ready for operation and displays the current wash tank and heating temperature.


7.4.3 Fill racks

NOTE: Remove coarse food soiling before washing. .


- ▶ Load plates in the rack crosswise.

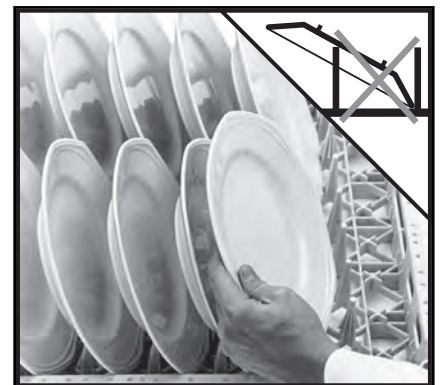


- ▶ Observe running direction.

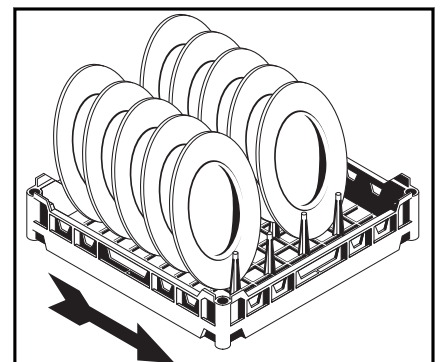

- ▶ Load trays in the rack crosswise.

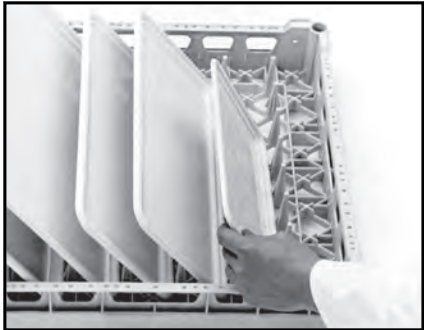

- ▶ Place cutlery vertically with handle downwards into cutlery racks. Load cutlery unsorted. Place the cutlery racks on a utensil rack.

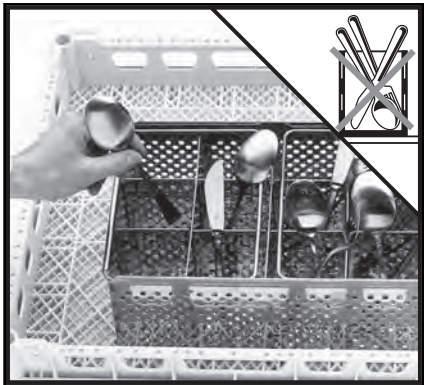

- ▶ Load cups in the racks with opening downwards. Use a suitable rack!




- ▶ Load glasses in the racks with opening downwards. Glasses should not touch each other (break fracture). Use a suitable rack! Use inclined racks wherever possible.




- ▶ Load glasses in the racks with opening downwards. Glasses should not touch each other (break fracture). Use a suitable rack!


Use inclined racks wherever possible.

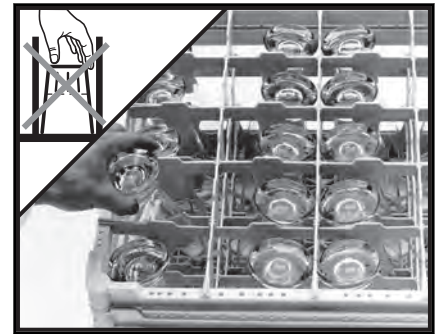


- ▶ Wash items and utensils in utensil rack.
Do not allow grips, handles etc. to protrude over the edge of the rack.
Place the rack on the conveyor.
Utensils must not protrude beyond the rack.
Secure lightweight wash ware by placing a grid on top.

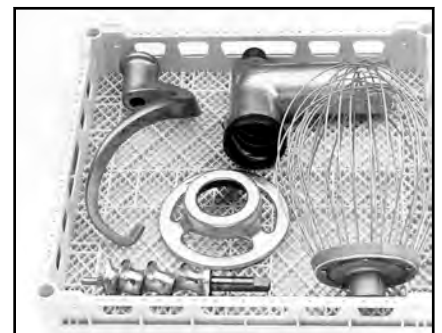

- ▶ Place gastronorm pans and other bowls with opening downwards.
Wash ware may not exceed maximum loading height and width.

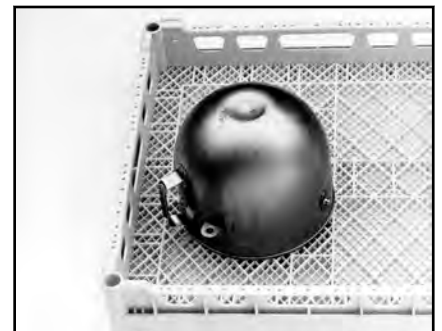

- ▶ Observe running direction.

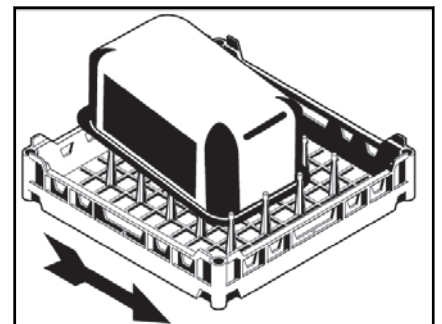

7.5 Functions and operating modes

7.5.1 Overview of functions

Name	Description	Features
EMERGENCY STOP	The machine can be shutdown in case of emergency.	See section 7.6

Name	Description	Features
Conveyor speed	There are two (optionally three) speeds to choose from: (slow), normal, fast.	See section 7.8
Emergency operation	The machine can be operated even if the required temperatures are not reached.	See section 8.7
Drain wash tanks	Drain the wash tanks if required	See section 7.11

7.5.2 Operating modes

Washing

The machine is ready to rinse as the conveyor is switched on. The rinse process starts only when wash ware is running in the machine. Prewashing, washing, rinsing and drying (if fitted) are activated automatically. If no wash ware follows, these functions switch off automatically.

Exhaust fan, drying blower and drive run on for a set time. The run-on times can be changed by authorised service personnel.

Standby mode

If no wash ware is delivered for a pre-defined time, the Autotimer switches off the conveyor. As soon as a new rack is pushed in, the conveyor starts automatically.

Alternatively, press the conveyor start button.

Emergency operation

The machine can be operated even if the required temperatures are not reached. When emergency operation is activated, the machine no longer conforms to DIN 10534, DIN 10510, and DIN 10522.


Emergency operation activation, see Chapter 8.7.

7.6 Pressing the EMERGENCY STOP button

The machine can be **shutdown** in case of emergency.

The EMERGENCY STOP button must be unlocked during operation.

- ▶ Press the EMERGENCY STOP button.

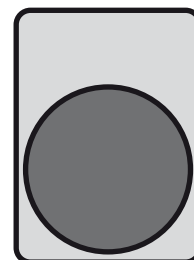

- ↳ The machine is being shutdown.
- ↳ However, the machine is not voltage free.

7.7 Washing

The machine is ready to rinse as the conveyor is switched on.

- ▶ Briefly press the conveyor start button
Selectively choose a slow, normal or fast speed (see chapter 7.8):
slow speed = for heavy soiling (option)
normal (DIN) speed = for normal soiling

fast speed = for slight soiling



- ↳ The LED under the conveyor start button illuminates permanently
- ↳ The conveyor switches on
- ↳ Pre-washing, washing, rinsing and drying are activated only if wash ware is running in the machine

- ▶ Allow the wash ware enough time to dry.



If no further wash ware is delivered over a pre-defined time, the machine switches to standby mode. If another rinse is required, a rack must be inserted until the Autotimer switch is enabled. The conveyor and wash cycle start.

7.8 Selecting the conveyor speed

When a wash programme is active, you can change to the other wash programme at any time.

Example: Press the programme selection button. The selected transport speed is shown on the display. You can switch to the next speed by pressing the programme selection button again.

7.9 Switching off the conveyor

If required, the conveyor can be switched off manually.

Switching off the conveyor:

- ▶ Briefly press the conveyor start button
Alternatively, briefly press the ON/OFF button.
 - ↳ The conveyor and washing switch off
 - ↳ The tanks are not drained
 - ↳ The heaters are not switched off
 - ↳ Exhaust fan and drying blower continue to run


7.10 Switching off the machine

NOTE: the machine is not voltage-free after being switched off!

Before switching off the machine, drain the tanks and clean the interior.


Switching off the machine:

- ▶ Press the machine ON/OFF button for min. 3 seconds

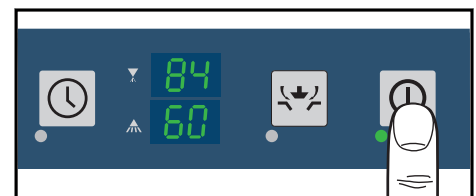

- ↳ The machine switches off
- ↳ Exhaust air blower and dryer blower may run on

- ▶ Switch off main switch.

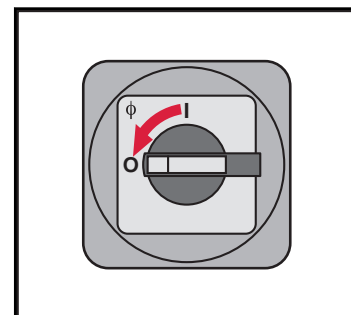

7.11 Executing daily cleaning

WARNING!



Risk of electric shock, fire hazard

If the machine is cleaned from the outside with a jet of water, water can penetrate the machine and flow over live components. This can cause injuries through electric shock or fire.

- ▶ Do not spray the outside of the machine with a water hose or high-pressure cleaner.

CAUTION!



Risk of being cut

When cleaning the machine, sharp edges of sheet parts can cause cut injuries.

- ▶ Wear protective gloves.

CAUTION!



Burning

When cleaning the machine interior after the tanks have been emptied, certain areas (tank heaters, dryer nozzles, water inlets, etc.) can still be hot and cause burning.

- ▶ Wear protective gloves.

NOTICE!

Property damage

The use of unsuitable agents can cause corrosion or damage to the surfaces.

- ▶ Do not use any chlorine-containing, acidic or metal-containing additives to clean the machine.
- ▶ Do not use metal sponges.


Please observe your in-house hygiene guidelines.

End the active wash programme:

- ▶ Briefly press the conveyor start button
Alternatively, briefly press the ON/OFF button.
↳ Transport and washing switch off

Drain wash tanks:

- ▶ Press and hold the drain button (min. 3 seconds)

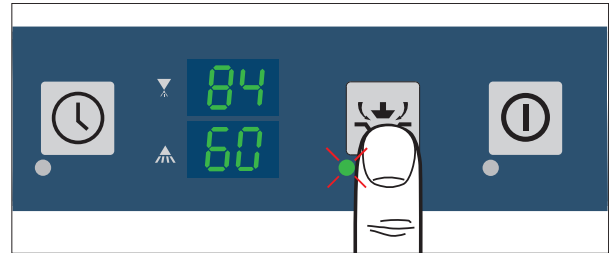

- ↳ All tanks are drained
- ↳ During the draining process, the button LED flashes. This process takes several minutes
- ▶ Open inspection doors.



- ▶ Remove and clean curtains.
- ▶ Unhook curtains and pull forwards.



- ▶ Remove the strainer baskets.



- ▶ Remove the tank cover strainers.



- ▶ Hose down and brush the strainers.
ATTENTION! Damage to property!

PROFI CS series

Operation

Do not strike the strainers! Strainers could be bent and will no longer fit.

- ▶ Remove the rinse strainer.



- ▶ Remove and clean wash arms.

CAUTION! Risk of crushing!

When removing the wash arms, the upper wash arm can fall down and cause crushing. Carefully remove the wash arms.

- ▶ Upper: Lift the wash arm via the retaining lug and pull it out to the front.



- ▶ Lower: Lift the wash arm and pull it out to the front.



- ▶ To clean, slide open the closure and hose down the wash pipes.
- ▶ Check the jet openings and clean as required.
- ▶ Remove and clean rinse arms.
- ▶ Upper: Pull the spring to the front and remove the rinse arm.




- ▶ Lower: Lift the rinse arm and pull it out to the front.


Check the jet openings and clean as required.



- ▶ Turn off main switch

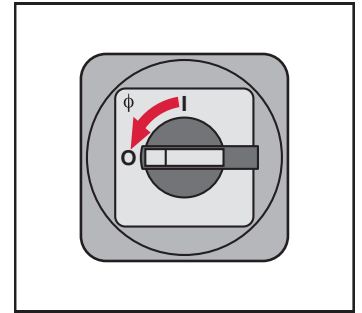


- ▶ Hose down the machine interior and clean.

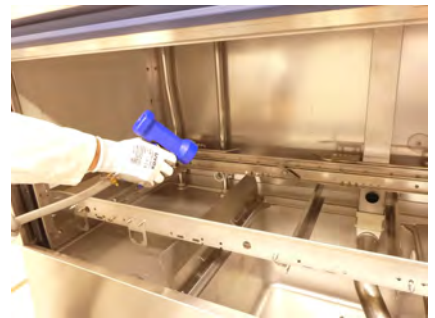


- ▶ Check the interior for residual soiling and wash ware parts and remove as required.

Drain wash tanks:

- ▶ Turn on main switch

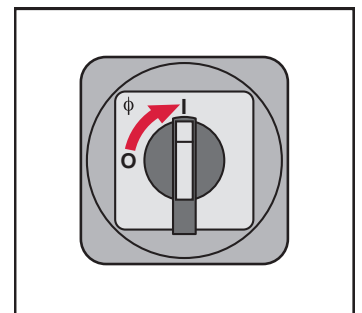


- ▶ Press and hold the drain button (min. 3 seconds)

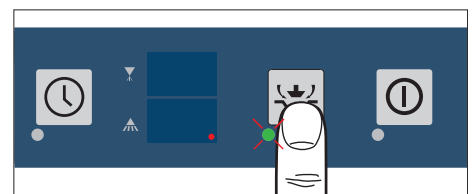


↳ All tanks are drained

↳ During the draining process, the button LED flashes. This process can take several minutes

- ▶ The machine switches off automatically after draining but is, however, not voltage free

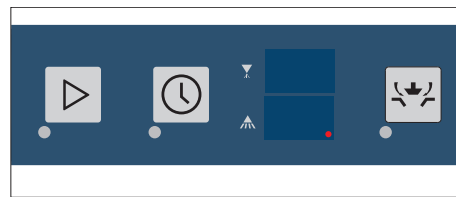


- ▶ Turn off the main switch.

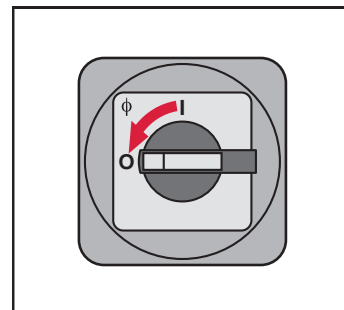

- ▶ Close site shut-off valves.
- ▶ Leave inspection doors open for ventilation.

7.12 Performing monthly cleaning

- ▶ Switch off main switch

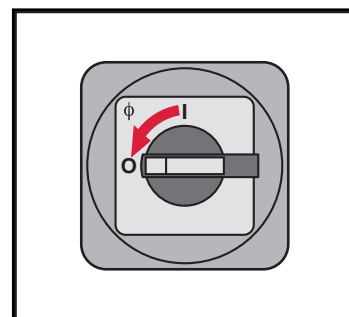

- ▶ Remove covers at the condenser cover




- ▶ Clean condensers (hose down with a water hose)




Drain wash tanks:

- ▶ Switch on main switch

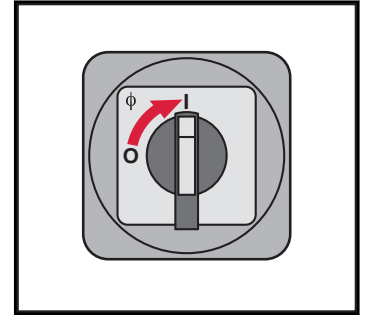


- ▶ Press and hold the drain button (min. 3 seconds)

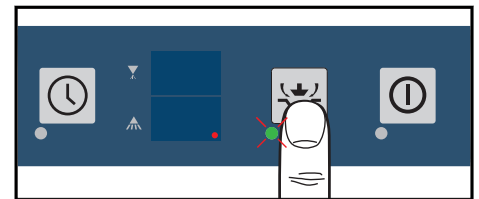

↳ All tanks are being drained

↳ During the draining process, the button LED flashes. This process can take several minutes

- ▶ Switch off main switch.

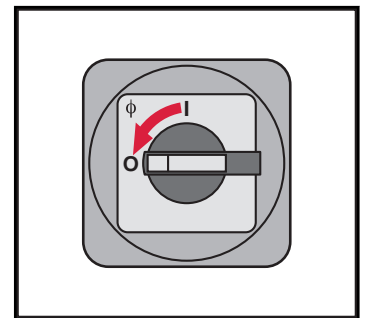

- ▶ Close local shut-off valves.
- ▶ Leave inspection doors open for ventilation.

8 Setting options

8.1 Overview of operator menu

In the operator menu, machine functions can be selected and operating data can be read out.

Submenu	Submenu no.	Function
Hour counter "Machine ON"	01	Display
Hour counter "Conveyor ON"	02	Display
Hour counter "Washing ON"	03	Display
Hour counter "Rinsing ON"	04	Display
Emergency operation activation Emergency Operation	EO	Setting


8.2 Opening the operator menu

NOTE: possible only when the machine is switched off

PROFI CS series

Setting options


- ▶ Open the door
- ▶ Press the conveyor start button and the programme selection button at the same time.

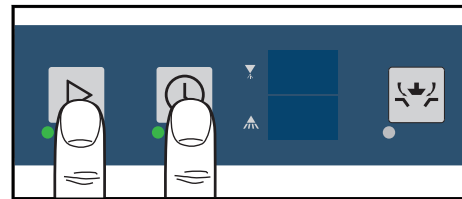


↳ The menu opens, button LEDs illuminate

- ▶ Close the door
- ↳ The first submenu item "01" is displayed as soon as the door is closed.

- ▶ Press the conveyor start button to scroll through the customer menu.

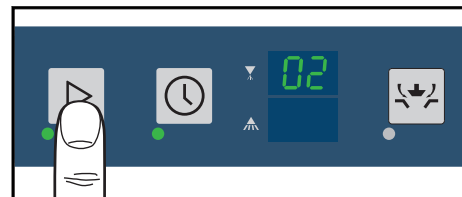


- ▶ Press the programme start button 2 to activate the submenu displayed.

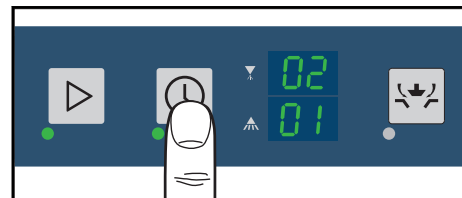

- ▶ The customer menu can be exited again by opening the door.

8.3 Display hour counter "Machine ON"

- ▶ Open submenu 01 (see section 8.2).

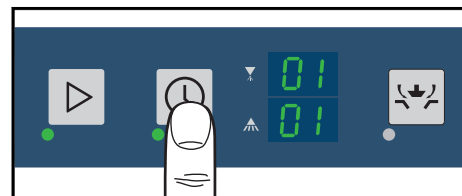


↳ The display at the top still shows the submenu selected

↳ The display at the bottom shows the first part of the operating hours


Due to the bottom display being limited to 2 places, the value of the operating hours (max. 6 places) is shown in three steps:

In this example: 013456 hours

- ▶ The next two places are shown when the programme selection button is pressed again.

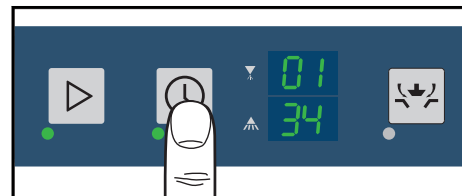

- ▶ The next two places are shown when the programme selection button is pressed again.

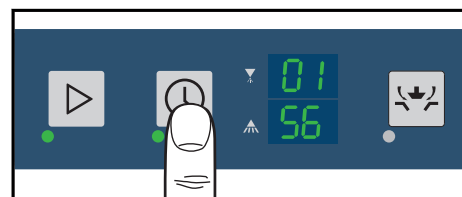

8.4 Display hour counter "Conveyor ON"

- ▶ Open submenu 02 (see section 8.2).
 - ↳ The display at the top still shows the submenu selected
 - ↳ The display at the bottom shows the first part of the operating hours

Display and procedure as section 8.3.

8.5 Display hour counter "Washing ON"

- ▶ Open submenu 03 (see section 8.2).
 - ↳ The display at the top still shows the submenu selected
 - ↳ The display at the bottom shows the first part of the operating hours

Display and procedure as section 8.3.

8.6 Display hour counter "Rinsing ON"

- ▶ Open submenu 04 (see section 8.2).
 - ↳ The display at the top still shows the submenu selected
 - ↳ The display at the bottom shows the first part of the operating hours


Display and procedure as section 8.3.

8.7 Activating emergency mode


If the necessary temperature cannot be reached due to a defect, individual error messages may be ignored by means of emergency operation. See section 10.1 for this purpose.

NOTE: When emergency operation is activated the machine no longer conforms to DIN SPEC 10534, DIN 10510, and DIN 10522.

- ▶ Open submenu EO (see section 8.2)

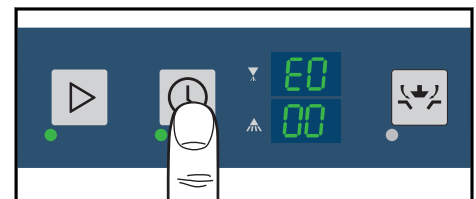

- ↳ The display at the top still shows the submenu selected
 - ↳ With display "00", the display at the bottom shows that the emergency operation is inactive
- ▶ The change is activated by pressing the ON/OFF button

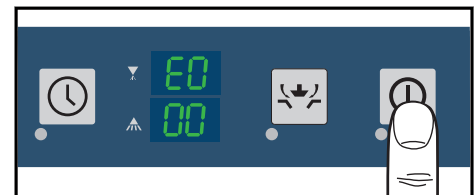


- ↳ The bottom display flashes

PROFI CS series


SmartConnect - WiFi / LAN / GSM (option)

- ▶ By pressing the programme selection button, you can set the emergency operation to active (=01)

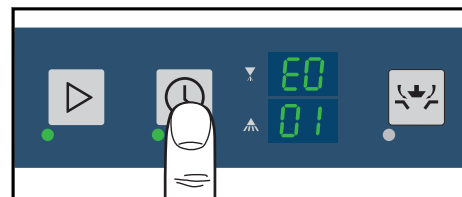

↳ The bottom display flashes

- ▶ The value is saved by pressing the ON/OFF button for 3 sec

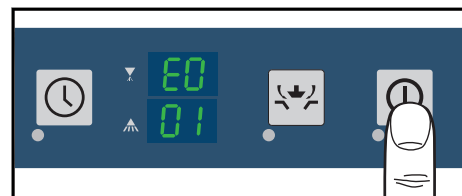

↳ You exit the customer menu

↳ Emergency operation is now active

If the emergency operation has been activated, this is displayed by a message "EO" (Emergency Operation) alternating between the top and bottom 7 segment display.

Emergency operation is deactivated by switching off the machine.

9 SmartConnect - WiFi / LAN / GSM (option)

Important: The functionality of WiFi / GSM outside of Europe depends on the availability of a local approval for the radio module. Contact your local Hobart distributor or visit www.itwfoodequipment.com/smartconnect365/help. To use a GSM connection, sufficient GSM reception must be available.

- Supports IEEE 802.11 b/g/n in the 2.4 GHz and 5 GHz frequency ranges.
- Maximum transmission capacity 19.6 dBm in the 2.4 GHz frequency range
- Encryption: WPA2-PSK / open network
- Port 53, 80, 123 and 443 free for communication between machine and server (default: open)
- IP address via DHCP or fixed IP address
- Connections via **Captive Portal** are not possible
- Adequate WiFi reception is required at the dishwasher's installation location (in case of WiFi)
- Adequate GSM reception is required at the dishwasher's installation location (in case of GSM)
- Correct setting of the date is ensured via the NTP client; the correct machine time zone has to be set for this

The HOBART SmartConnect app is available for download from the App Store and the Play Store.

Web browser version at <https://hobart.smartconnect365.com>

9.1 Integrating the machine into the GSM network

The supplied GSM stick is configured at the factory.

If necessary, for example when exchanging the SIM card, the GSM stick can be connected to a PC via USB and the configuration page for the GSM stick can then be opened.

Additional settings on SmartConnect are not necessary. Finish initial setup in chapter 9.4

9.2 Integrating the machine into the local WiFi

Connect the supplied WiFi router (here: TP-Link) to an Internet-capable device and open the configuration page for the WiFi router to configure the desired WiFi settings.

Additional settings on SmartConnect are not necessary. Finish initial setup in chapter 9.4

9.3 Integrating the machine into the LAN

The machine is connected to the customer network via LAN cable. An IP address is requested from the customer network via DHCP as standard.

Additional settings on SmartConnect are not necessary. Finish initial setup in chapter 9.4

Additionally in case of LAN connection with static IP:

(Have service technician enable static address assignment)

- To be able to parameterise the SmartConnect, the PC must be in the same IP address range.
IP range: 192.168.133.1 – 192.168.133.200, subnet mask: 255.255.255.0
- Connect SmartConnect to PC via X1 LAN – P2
- Open SmartConnect dashboard
- Enter IP address, subnet mask, gateway
- Save configuration
The LAN connection **X1 LAN – P1** has been changed according to the specifications
- Finish initial setup in chapter 9.4

9.4 Registering the machine

Connect to SmartConnect:

- **GSM:** Via **X1 LAN – P2** interface, establish static connection. (192.168.133.254/24)
- **WiFi:** Via WiFi network, establish connection via hostname
Alternative: Via **X1 LAN – P2** interface, establish static connection. (192.168.133.254/24)
- **LAN:** Via **X1 LAN – P1** interface, establish connection via hostname (alternatively via IP)
Alternative: Via **X1 LAN – P2** interface, establish static connection. (192.168.133.254/24)

The hostname is HOBART plus the serial number of the machine.

HOBART_<serial number>

- ▶ Open the dashboard.
- ▶ Alternative:
- ▶ Log in with the user **user3** (password u3333).
- ▶ Select ACCEPT GTCs.

↳ The terms of use are displayed; read and accept them.

PROFI CS series

Faults and problems

- ▶ Select Query registration.
- ▶ The registration code is generated.



↳ It is valid for 48 hours and is required for the integration of the machine into the SMARTCONNECT app.

10 Faults and problems

10.1 Troubleshooting guide

NOTE: Operation may be restricted depending on the error type.

Error code	Error message	Possible cause	Acknowledgement	Measure
Er 01	Tank fill time exceeded	Flow rate during filling too low. Faulty filling valve or fault in the filling system.	Machine OFF/ON	Check on-site water supply If this continues, contact your HOBART service partner
Er 02	Tank fill time exceeded	Flow rate during filling too low. Faulty filling valve or fault in the filling system.	Self reset after troubleshooting	Check on-site water supply If this continues, contact your HOBART service partner
Er 03	Fill start temperature	Fault in the control circuit of the boiler	Machine OFF/ON or switch to emergency operation	Inform your HOBART Service Partner
Er 04	Boiler not reaching temperature	Boiler not reaching temperature. Curtains missing or positioned incorrectly. Fresh water too cold	Conveyor ON/OFF	Wait until the target temperature has been reached To acknowledge, start conveyor If this continues, contact your HOBART service partner
Er 05	Fill time exceeded Tank	Flow rate during filling too low. Faulty filling valve or fault in the filling system.	Machine OFF/ON	Check on-site water supply If this continues, contact your HOBART service partner

Error code	Error message	Possible cause	Acknowledgement	Measure
Er 06	Wash tank not reaching temperature	Wash tank not reaching temperature. Curtains missing or positioned incorrectly	Conveyor ON/OFF	Wait until the target temperature has been reached To acknowledge, start conveyor If this continues, contact your HOBART service partner
Er 07	Doors / covering opened	Doors / covering opened or not closed completely	Self reset after trouble-shooting	Close doors and / or covering
Er 08	Conveyor blockage	Conveyor blocked by the wash ware	Conveyor ON/OFF	Remove the blockage
Er 09	Table limit switch	Rack jam, table limit switch has tripped	Self reset after trouble-shooting	Remove rack jam
Er 10	Water level wash tank low	Water carried over by the wash ware	Self reset after trouble-shooting	Wait until the machine has sufficiently refilled with water To acknowledge, start conveyor If this continues, contact your HOBART service partner
Er 11	Autotimer error	Autotimer blocked or defective	Machine OFF/ON	Inform your HOBART Service Partner
Er 12	Drain fault complete drain	Fault in the drain system, valve defective, drain clogged	Machine OFF/ON	Wait until the machine has cooled own Turn off the power supply to the machine Check the wash tank drain for clogging If this continues, inform your HOBART service partner
Er 13	Total value of pressure sensor for wash tank exceeded	Sensor defective	Machine OFF/ON	Inform your HOBART Service Partner
Er 14	Total value of pressure sensor for pre-wash tank exceeded	Sensor defective	Machine OFF/ON	Inform your HOBART Service Partner
Er 15	Total value pressure sensor wash tank undercut	Sensor defective	Machine OFF/ON	Inform your HOBART Service Partner
Er 16	Total value pressure sensor pre-wash tank undercut	Sensor defective	Machine OFF/ON	Inform your HOBART Service Partner
Er 17	Emergency stop active	EMERGENCY STOP pressed	Machine OFF/ON	Remove the hazard (if present), Pull the EMERGENCY STOP button

Error code	Error message	Possible cause	Acknowledgement	Measure
Er 18	Hardware communication error	Interruption between CU and HMI	Self reset after troubleshooting	Inform your HOBART Service Partner
Er 21	Boiler temperature sensor defective	Temperature sensor interrupted	Machine OFF/ON or switch to emergency operation	Inform your HOBART Service Partner
Er 22	Tank temperature sensor defective	Temperature sensor interrupted	Machine OFF/ON or switch to emergency operation	Inform your HOBART Service Partner
Er 23	Boiler temperature sensor defective	Temperature sensor short-circuit	Machine OFF/ON or switch to emergency operation	Inform your HOBART Service Partner
Er 24	Tank temperature sensor defective	Temperature sensor short-circuit	Machine OFF/ON or switch to emergency operation	Inform your HOBART Service Partner
Er 25	Boiler temperature control	Boiler temperature limit exceeded	Machine OFF/ON	Inform your HOBART Service Partner
Er 26	Tank temperature control	Tank temperature limit exceeded	Machine OFF/ON	Inform your HOBART Service Partner
Er 29	Plausibility check	Error in safety chains	Machine OFF/ON	Inform your HOBART Service Partner

10.2 Remediating the problem

10.2.1 Poor wash result

Nature of the problem	Possible cause	Remedy
Washware not clean.	Strainers wrongly positioned.	Check strainers.
	Curtains not or incorrectly hung.	Check curtains.
	Wash jets clogged.	Clean wash arms.
	Insufficient detergent.	Check detergent dosing, or have supplier reset as required.
	Excess foam.	Use non-foaming detergent.
	Not properly pre-scrapped.	Pay attention to better pre-scrapping.
	Temperatures too low.	Check heaters.
	Conveyor speed too high.	Select lower speed.
Washware does not dry properly.	Rinse aid dosing too low.	Increase concentration (see operating instructions).
	Washware still greasy.	Detergent concentration too low: increase (see operation instructions). Check if detergent is appropriate. If not, choose a stronger one. Drain contaminated water and refill machine. Ensure better pre-scrapping of the washware.
	Temperature or humidity of the drying air incorrect.	Check heating rods and dryer fan.
	Conveyor speed too high.	Select lower speed.

Nature of the problem	Possible cause	Remedy
Streaks and spots on washware.	Strainers wrongly positioned.	Check strainers.
	Wash water splashes into rinse section.	Check curtains.
	Rinse jets clogged.	Clean jets.
	Incorrect rinse aid dosing.	Check dosing device and have it adjusted.
	Mineral content of rinse water too high.	Check mineral content of the water.

10.2.2 Other problems

Nature of the problem	Potential causes	Remedy
No initial fill of boiler possible.	Site water supply is closed off.	Open water valve at building side and restart.
	Error in the filling system.	Inform customer service.
Tank filling takes too long.	Dirt trap clogged.	Clean dirt trap.
	Faulty solenoid valve.	Inform customer service.
	Site shut-off valve opened incorrectly.	Shut-off valve fully open.
Tank does not fill.	Fill time too short.	Inform customer service.
	Site shut-off valve opened incorrectly.	Shut-off valve fully open.
Steam escaping at loading section or exit end.	Vapour extraction too low.	Inform customer service.
	Curtains hung incorrectly.	Check curtains.
	Too much wash water splashes into the loading section.	Check wash arms, curtains and baffle plate. Position wash ware correctly.
	Dryer baffle plate mis-aligned.	Adjust the slide at the drying nozzle.
Temperatures too low.	Vapour extraction too high.	Inform customer service.
	Heaters faulty.	Check heaters, inform customer service as required.
Wash ware is overturned.	Water pressure from below too strong.	Inform customer service.
	Upper wash arms clogged.	Clean wash arms.
Machine not operating, no information on display.	Main switch turned off, machine is completely without power.	Switch on the main switch, restart the machine.
	Display defective.	Inform customer service.
	Power outage.	Check site fuses.
Machine cannot be switched on or is not responding.	Control element defective.	Main switch OFF.
	Controller faulty	Separate machine from the mains. Inform customer service.

PROFI CS series

Service and maintenance

11 Service and maintenance

WARNING!



Risk of electric shock

When replacing worn or faulty parts, contact with current-carrying parts can cause serious injuries through electric shock.

- ▶ Have these activities carried out only by certified, qualified personnel.
- ▶ Turn off the main switch.

WARNING!



Risk of burns

In case of maintenance and repairs, surfaces may still be hot and result in burns.

- ▶ Wear protective gloves.

WARNING!



Chemical burns, sensitisation of the skin, poisoning

Incorrect handling of detergent or rinse aid can lead to serious injuries.

- ▶ Use only commercially available detergents and rinse aid (for industrial use).
- ▶ Observe the manufacturer's application and safety instructions.
- ▶ Wear protective equipment (gloves, safety goggles, protective clothing) when handling chemicals.



In order to maintain the warranty, as well as a permanently safe, efficient, and trouble-free operation of the machine(s), the required maintenance must be carried out by authorized service technicians.

NOTE: Maintenance must be performed at least once a year.

We therefore recommend the conclusion of an inspection and maintenance contract, which guarantees qualified support by specially trained service technicians according to a time schedule based on the operating conditions.

Genuine spare parts must be used for repairs and wearing part replacements.

In Germany, your machines and systems are governed by the Ordinance on Industrial Health and Safety and must be inspected by a qualified electrician in accordance with the intervals specified in DGUV V3 (BGV A3).

Additional nationally-applicable directives must be observed accordingly.

12 Disposal

- ▶ The machine operator is responsible for disposing of the machine and its operating materials correctly and in accordance with environmental regulations. Observe the national and local legal provisions and regulations.



13 Product disclaimer

Installations and repairs carried out by non-authorized technicians or using non-genuine spare parts, and any technical alterations to the machine not approved by the manufacturer will invalidate the manufacturer's warranty and product liability.

HOBART reserves the right to make changes or improvements to its products without prior notice.

© HOBART GmbH, Offenburg 2024

14 Conformity



Original

EG-Konformitätserklärung

Declaration of Conformity / Déclaration de Conformité / Declaración de Conformidad / Dichiarazione di conformità / Conformiteitsverklaring / Deklaracja zgodności / Försäkran om överensstämmelse / Uygunluk beyanı / Deklaracija o skladnosti / Izjava o skladnosti / Declaração de Conformidade / Prohlášení o shodě

Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller.

This declaration of conformity is issued under the sole responsibility of the manufacturer.
La présente déclaration de conformité est établie sous la seule responsabilité du fabricant.
La presente declaración de conformidad se expide bajo la exclusiva responsabilidad del fabricante.
La presente dichiarazione di conformità è rilasciata sotto la responsabilità esclusiva del fabbricante.
Deze conformiteitsverklaring wordt verstrekt onder volledige verantwoordelijkheid van de fabrikant.
Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta.
Denna försäkran om överensstämmelse utfärdas på tillverkarens eget ansvar.
Bu uygunluk beyanı, tamamen üreticinin sorumluluğuna altında düzenlenmiştir.
Ova izjava o skladnosti izdaje se na isključivo odgovornost proizvođača.
Ta izjava o skladnosti je izdana na lastno odgovornost proizvajalca.
A presente declaração de conformidade é emitida sob a exclusiva responsabilidade do fabricante.
Toto prohlášení o shodě se vydává na výhradní odpovědnost výrobce.

Maschine:	Kortransport - Spülmaschine	Hersteller / Dokumentationsbevollmächtigter:	HOBART GmbH / Verena Wiedenhöfer
Machina:	<i>Rack - Conveyor - Dishwasher</i>	Manufacturer / authorized to compile the technical file:	Robert-Bosch-Strasse 17
Machina:	<i>Lave vaisselle à avancement automatique de casiers</i>	Fabricant / autorisée à constituer le dossier technique:	77656 Offenburg / Germany
Máquina:	<i>Tuneles de cestas</i>	Fabricante / autorizado para unificar la información técnica:	
Machina:	<i>Lavastoviglie a cesto trainato</i>	Fabbricante / Responsabile della documentazione:	
Machina:	<i>Rekentransport vaatwasmachine</i>	Fabrikant / Geautoriseerd om de technische documentatie samen te stellen:	
Urządzenie:	<i>Zmywarki tunelowe z transportem koszy</i>	Producent / autoryzowany przedstawiciel:	
Maskinens:	<i>Rack Typ Transportband Diskmaskin</i>	Tillverkare / behörigt att sammanställa den tekniska filen:	
Makine:	<i>Basketli Konveyörlü Bulaşık Makinası</i>	Üretici / Dokümantasyon yetkilisi:	
Stroj:	<i>Tračna perilica posuda sa košarama</i>	Proizvođač / ovlašten za sastavljanje tehničkog spisa:	
Stroj:	<i>Transport košar - pomivalni stroj</i>	Proizvajalec / pooblaščen za dokumentacijo:	
Máquina:	<i>Transporte do cesto - máquina lava-loiça</i>	Fabricante / Responsável pela documentação:	
Stroj:	<i>Pleprava koši - mycí zařízení</i>	Výrobce / osoba zplnomocněná sestavením dokumentace:	
Model:	CS-E1-xx	Type:	CS-20-01
	ECO+CB15-xx	Serial No.:	86 43 XXXXX

Hiermit bestätigen wir, dass die genannte Maschine entsprechend den nachfolgend aufgeführten Normen gefertigt und geprüft worden ist.

Herewith our confirmation that the named machine has been manufactured and tested in accordance with the following standards.
Par la présente, nous déclarons que la machine citée ci-dessus a été fabriquée et testée en conformité aux normes.
Por la siguiente confirmamos que la máquina mencionada ha sido fabricada conforme a las siguientes normas.
Con la presente confermiamo che la macchina indicata è stata costruita in conformità alle norme di seguito riportate.
Hierbij bevestigen wij dat de genoemde machine is gefabriceerd en getest volgens de hiervolgende voorwaarden.
Niniejszym deklarujemy, że wymieniony produkt spełnia wymogi następujących norm.
Härmed bekräftar vi att den nämnda maskinen har tillverkats och testats i enlighet med följande standarder.
Izjava belje ile beriljen maskinini sažadja listelene normar dogruitsunda hazırlanmış beyan ediriz.
Ovimе potvrđujemo da je gore navedeni stroj proizveden i testiran sukladno sjeleđim standardima.
S tem izjavljamo, da je naveden stroj izdelan in preizkušen v skladu s spodaj navedenimi standardi.
Com a presente declaramos que a máquina supracitada foi construída e inspeccionada segundo as normas referidas a seguir.
Tímto potvrzujeme, že uvedený stroj byl vyroben a zkontrolován podle následujících norem.

EN 17735:2022	EN IEC 62368-1:2024 + A11:2024
EN 55011:2016 + A1:2017 + A11:2020 + A2:2021	EN IEC 62311:2020
EN 50416:2005 + A1:2015	EN 301 489-1 V2.2.3
EN 60204-1:2018	Draft EN 301 489-17 V3.2.2
EN IEC 61000-4-3:2020	EN 300 328 V2.1.1
EN IEC 61000-6-2:2019	
EN IEC 61000-6-4:2019	
EN ISO 12100:2010	
EN IEC 63000:2018	

Die Maschine stimmt mit den folgenden Richtlinien überein:

The product complies with the following directives:
La machine est conforme aux directives fixées:
La máquina armoniza con las siguientes Directivas:
La macchina è conforme alle direttive seguenti:
Het product voldoet aan de volgende richtlijnen:
Urządzenie spełnia wymogi następujących dyrektyw:
Maskinens uppfyller följande direktiv:
Makine, sağıdaki yönetmelikler ile uyumludur:
Ovaj stroj je u skladu sa sjeleđim direktivama:
Stroj ustreza zahtevam sjeleđih direktiv:
A máquina está em conformidade com as seguintes diretivas:
Stroj je v skladu s ustanovenimi následujících směrníc:

2006/42/EG	(Maschinenrichtlinie, Machinery-Directive)
2014/30/EU	(EMV-Richtlinie, EMC-Directive)
2014/53/EU	(Funkanlagen-Richtlinie, RED)
2011/65/EU	(RoHS Richtlinie, RoHS Directive)

Die Schutzziele der Niederspannungsrichtlinie 2014/35/EU wurden gemäß Anhang I Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten.

Protective Goals of the Low Voltage Directive 2014/35/EU are in compliance with Appendix I No 1.5.1 of the Machinery Directive 2006/42/EC.
Les objectifs de protection de la directive sur les basses tensions 2014/35/UE ont été respectés conforme à l'annexe I Nr. 1.5.1 der de la directive relative aux machines 2006/42/CE.
Directiva de proteccion de baja tension 2014/35/UE estan en acuerdo con el apendice I No 1.5.1 de la directiva de maquinaria 2006/42/CE.
Gli obiettivi di protezione della direttiva per basse tensioni 2014/35/UE è stata rispettata secondo allegato I n. 1.5.1 della Direttiva per macchine 2006/42/CE.
De veiligheidsdoelstellingen van de laagspanningsrichtlijn 2014/35/EU zijn nageleefd in overeenstemming met nr. 1.5.1 van bijlage I van de machine richtlijn 2006/42/EG.
Produkt spełnia wymogi bezpieczeństwa dyrektywy niskonapięciowej 2014/35/UE, zgodnie z załącznikiem I nr. 1.5.1 dyrektywy maszynowej 2006/42/WE.
Skydds målen i lågspänningsdirektivet 2014/35/EU är i överensstämmelse med bilaga I nr 1.5.1 i maskindirektivet 2006/42/EC.
Alçak Gerilim Yönetmeliği 2014/35/EU'nin koruyucu hedeflerine, Makine Yönetmeliği 2006/42/EC, ek I no. 1.5.1'e göre uyulmuştur.
Sigurnosni ciljevi direktive o niskom naponu 2014/35/EU udovoljavaju dodatku I br. 1.5.1. Direktive o strojevima 2006/42/EC.
Uspořetování so zaščitni cilji Direktive o nizki napetosti 2014/35/EU v skladu s prilogi I, št. 1.5.1 Direktive o strojih 2006/42/ES.
Os objetivos de proteção da Diretiva de Baixa Tensão 2014/35/UE foram cumpridos de acordo com o Apêndice I, n.º 1.5.1 da Diretiva de Máquinas 2006/42/CE.
Cile ochrany die niskonapětové směrnice 2014/35/EU byly splněny dle přílohy I č. 1.5.1 směrnice o strojních zařízeních 2006/42/ES.

Bestätigt durch:
Confirmed by:

Offenburg, 02.06.2025

ppa.

Harald Disch
Direktor Produktentwicklung Europa
Director Warewash Engineering Europe



Original

Declaration of Conformity

Authorized to compile the technical file:

This declaration of conformity is issued under the sole responsibility of the manufacturer.

HOBART UK
Southgate Way, Orton Southgate,
Peterborough, PE2 6GN, UK

Machine: Rack - Conveyor - Dishwasher

Trade mark: HOBART

Type: CS-E1-xx
ECO+C815-xx

Design State: CS-20-01

Serial No.: 86 43 XXXXX

Herewith our confirmation that the named machine has been manufactured and tested in accordance with the following designated standards.

DIN SPEC 10534:2019-02	BS EN IEC 62368-1:2020+A11:2020
BS EN 55011:2016+A11:2020	BS EN IEC 62311:2020
BS EN 50416:2005+A1:2015	EN 301 489-1 V2.2.3
BS EN 60204-1:2018	Draft EN 301 489-17 V3.2.2
BS EN IEC 61000-4-3:2020	EN 300 328 V2.1.1
BS EN IEC 61000-6-2:2019	
BS EN IEC 61000-6-4:2019	
BS EN ISO 12100:2010	
BS EN IEC 63000:2018	

The product complies with the following regulations:

SI 2008/1597 (The Supply of Machinery (Safety) Regulations 2008)
 SI 2016/1091 (The Electromagnetic Compatibility Regulations 2016)
 SI 2017/1206 (The Radio Equipment Regulations 2017)
 SI 2012/3032 (The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012)

Protective Goals of the Electrical Equipment (Safety) Regulations 2016 (SI 2016/1101) are in compliance with
 Appendix I No 1.5.1 of the Supply of Machinery (Safety) Regulations 2008 (SI 2008/1597).

Confirmed by:

Offenburg, 01.07.2021

ppa.

Harald Disch
Director Warewash Engineering Europe

HOBART GmbH

Robert-Bosch-Str. 17
77656 Offenburg
Deutschland
Tel.: +49 (0)781.600-0
Fax: +49 (0)781.600-23 19
E-Mail: info@hobart.de
Internet: www.hobart.de

HOBART Export

Robert-Bosch-Str. 17
77656 Offenburg
Germany
Phone: +49 (0)781.600-2820
Fax: +49 (0)781.600-2819
E-Mail: info-export@hobart.de
Internet: www.hobart-export.com

Hobart UK.

Southgate Way,
Orton Southgate,
Peterborough
PE2 6GN
United Kingdom
Tel.: +44 (0)844 888 7777
Republic of Ireland: +353 (0)1246 0248
Fax: +44 (0)1733 361 347
E-mail: sales@hobartuk.com
Internet: www.hobartuk.com

Compagnie HOBART SAS

Allée du 1er mai
77183 Croissy Beaubourg
FRANCE
Tel: +33 (0)1 64 11 60 00
Fax: +33 (0)1 64 11 60 10
E-mail: contact@hobart.fr
Internet: www.hobart.fr

Hobart Nederland BV

Pompmolenlaan 12
3447 GK Woerden
Telefoon +31 (0)348 462626
Fax: +31 (0)348 430117
E-mail: info@hobartnederland.nl
Internet: www.hobartnederland.nl

Hobart Foster Belgium bvba/sprl

Industriestraat 6
1910 Kampenhout
Telefoon +32 (0) 16.60.60.40
Fax +32 (0) 16.60.59.88
E-mail: info@hobart.be
Internet: www.hobart.be

Hobart Norge

Gamle Drammenvei 120
N-1363 Høvik
Tlf.: +47-67109800
Fax.: +47-67109801
E-post: post@hobart.no
Hjemmeside: www.hobart.no

Hobart Scandinavia ApS

Håndværkerbyen 27
2670 Greve
Danmark
Tlf.: +45 4390 5012
Fax.: +45 4390 5002
E-mail: salg@hobart.dk
Internet: www.hobart.dk

Hobart Sweden/Finland

Tel: +46 8 584 50 920
E-mail: info@hobart.se
Internet: www.hobart.se

Australia

Hobart Food Equipment
Unit 1 / 2 Picken Street,
Silverwater NSW, 2128
Tel: +61 1800 462 278
Fax: +61 02 9714 0222
E-mail: sales@hobartfood.com.au
Internet: www.hobartfood.com.au

HOBART China

15th Floor, Building A
New Caohejing International Business
Center
391 Gui Ping Road
Shanghai, 200233
Telephone: +86 (0)21 34612000
Fax: +86 (0)21 34617166
Internet: www.hobartchina.com

HOBART Korea LLC

7th Floor, Woonsan Bldg, 108, Bangi-dong
Songpa-gu, Seoul 138-050
Korea
Telephone: +82 2 34 43 69 01
Fax: +82 2 34 43 69 05
E-mail: contact@hobart.co.kr
Internet: www.hobart.co.kr

HOBART (Japan) K.K.

6-16-16 Minami-Oi, Shinagawa-ku,
Tokyo 140-0013
Japan
Telephone: +81 3 5767 8670
Fax: +81 3 5767 8675
E-mail: info@hobart.co.jp
Internet: www.hobart.co.jp

Hobart International (S) Pte Ltd

158, Kallang Way, #06-03/05
Singapore 349245
Telephone: +65 6846 7117
Fax: +65 6846 0991
E-mail: enquiry@hobart.com.sg
Internet: http://www.hobart.com.sg

Hobart Thailand

43 Thai CC Tower Building,
31st FL, Room No. 310-311,
South Sathorn Rd., Yannawa,
Sathorn, Bangkok, 10120
Thailand
Telephone: +66(0)2-675-6279-81
Fax: +66(0)2-675-6282
E-mail: enquiry@hobartthailand.com
Internet: http://www.hobartthailand.com

ITW India Pvt Ltd.

501-502 Vipul Trade Centre
Sector 48 Sohna Road
Gurgaon 122001
Telephone: +91 124 4245430
Fax: +91 124 4245432